HAWS DRINKING FAUCET COMPANY
INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

1435 Fourth Street • P.O. Box 1999 • Berkeley, CA 94701 • (510)525-5801 FAX 510-528-2812
HAWS AG • Solothurnstrasse 24G • 3422 Kirchberg/Bern • Switzerland

No. 2080058

MODEL 7500 Portable Eyewash

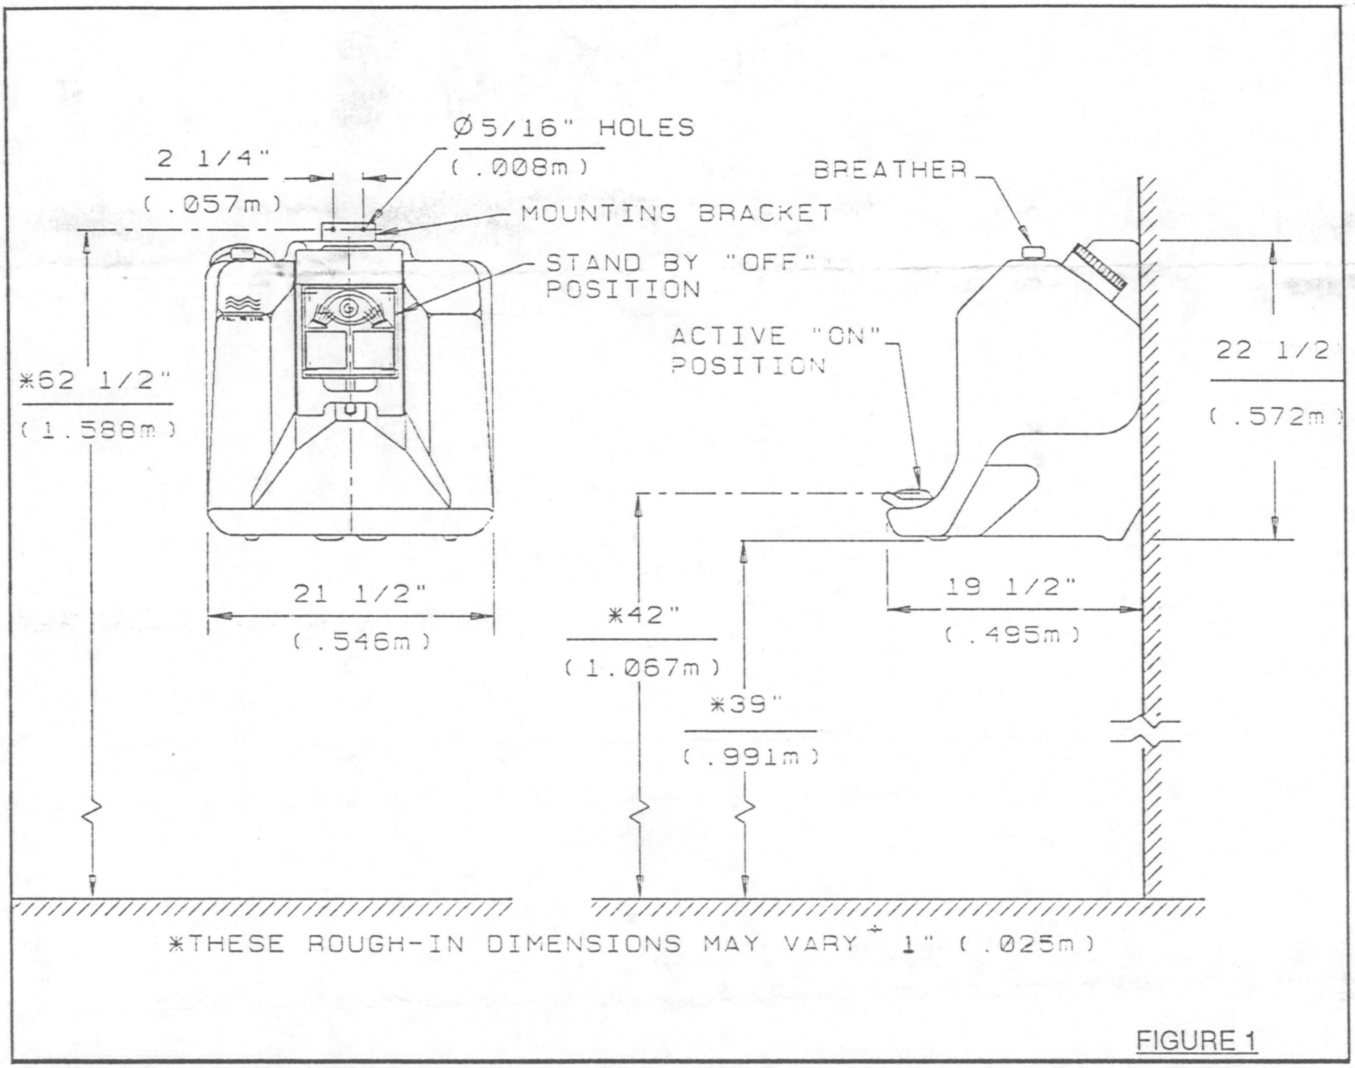

FIGURE 1

NOTE TO INSTALLER: Please leave this information with the maintenance department.

RECOMMENDED TOOLS: Two 1/4" diameter anchors suitable for supporting filled eye wash (approximately 140 pounds) and tools needed to install these anchors.

LOCATION OF UNIT: The Model 7500 Portable Eye Wash should be installed in close proximity to potential accident areas. It should be clearly identified, free from obstructions and easily accessible. May be wall or shelf mounted.

PARTS LIST

MODEL	ITEM #	QTY	DESCRIPTION
7500	1	1	Eye Wash Assembly
	2	1	Mounting Bracket
9081	3	1	Package Bacteriostatic Additive
	4	1	Drain hose with barb fitting
	5	1	Test Record Tag

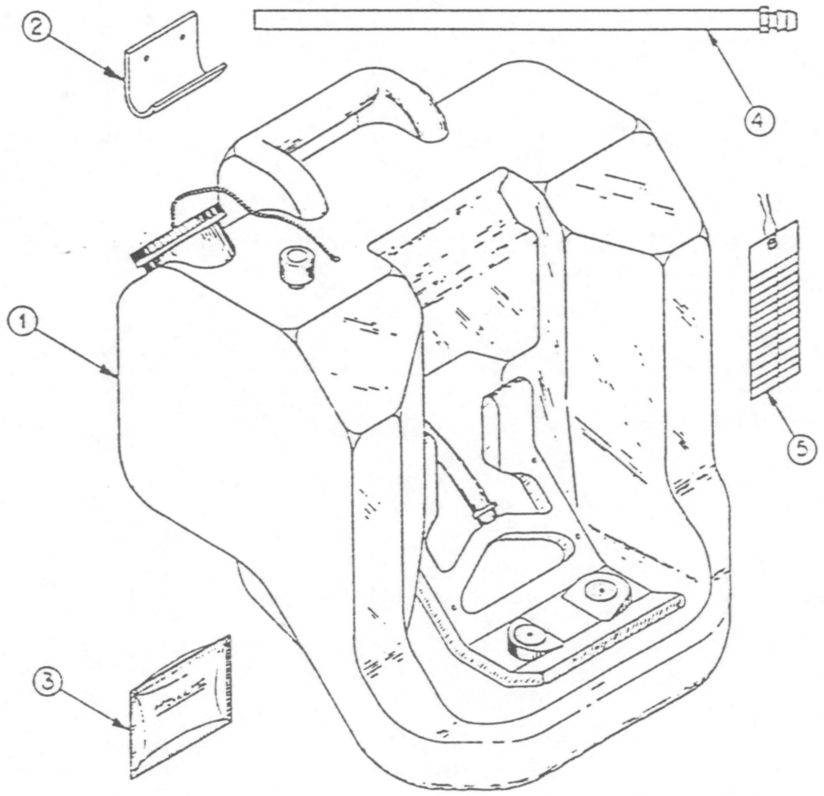

INSTALLATION INSTRUCTIONS

1. Wall mount with "J" Bracket (See Figure 1) or shelf mount. Eye wash nozzles should be between 33 inches (83.8 cm) and 45 inches (114.3 cm) above the floor when eye wash arm is in the active (lowered) position.

   Important: Filled eye wash unit is heavy (approximately 140 pounds). Wall bracket anchors or shelf must be strong enough to support the filled eyewash and the weight of a worker leaning on eyewash.

2. Install drain hose, if desired. Barb fitting threads into hole in bottom of eyewash bowl area.

3. Take proper precautions to help prevent the growth of potentially harmful bacteria in eyewash tanks. We recommend either of the following procedures:

   A. Use suitable bacteriostatic additive to help prevent the growth of bacteria in the eyewash tank. Eyewash tank should be drained, flushed and refilled with clean potable water and bacteriostatic additive as directed by the additive's manufacturer

   B. Drain, flush and refill portable units with clean potable water at least once every week. Thoroughly cleanse tank at least once every month.

   NOTE: Acanthamoeba survive mild chlorination and are commonly found in tap water. Hydrosep Bacteriostatic additive will prevent the growth of acanthamoeba. Hot water, 140 ° F(60°C) or hotter will destroy acanthamoeba but must be allowed to cool prior to use in eyewash units.

OPERATING INSTRUCTIONS

Instruct all employees in the use of this Emergency Eyewash. Test weekly. Personnel should be assigned to check eyewash liquid level daily.

STEP 1. Lead patient to nearest eyewash station. Seconds can make the difference in preventing serious eye injury.

STEP 2. Grasp top of eyewash arm and pull firmly. Lower arm to eyewash bowl to activate eyewash stream.

STEP 3. Lower head until eyes enter eyewash stream. Use thumbs and forefingers to hold eyelids open. Flush for 15 minutes.

STEP 4. Seek qualified medical attention immediately.

TROUBLE SHOOTING

	PROBLEM		REPAIR CHECKLIST
1.	No Flow	1. a)	Tank Empty. Refill tank.
		b)	Obstruction in line or barb fitting. Clear obstruction.
2.	Poor flow from Eye Wash Head(s)	2. a)	Tighten head assembly.
		b)	Check for obstructions. If necessary, remove eye wash head(s), clean and reassemble. To reassemble head, place cap screw through head and thread into head anchor two or three turns. Tilt head assembly and work anchor legs into eye wash arm holes. Tighten assembly. Check for leaks.
		c)	Clogged breather vent. Clean vent.
3.	Water leak between joints or fittings.	3. a)	Tighten barb fitting nut(inside tank). If necessary , replace hose or barb fitting rubber washer.
		b)	Tighten hose clamp(s) with pliers.
		c)	Pull hose off barb fitting. Smooth raised plastic edge on center of barb fitting. Return hose and hose clamp to original position.
4.	Eyewash flows for less than 15 minutes.	4. a)	Fill tank to fill cap opening for increased flow duration.
5.	Arm does not hold firmly in standby position.	5. a)	Firmly rap the sign with the side of hand when arm is in upright position. This will "set" velcro for firm retention.
		b)	Replace arm velcro.

MAINTENANCE

1. Check eyewash liquid level and temperature daily. Once every week test eyewash for 10 seconds to insure proper flow from eyewash heads. After testing top off tank with clean, potable water. Record weekly Testing/Inspection on test tag or separate maintenance log book (preferred).

2. Take proper precautions to help prevent the growth of potentially harmful bacteria in eyewash tanks. We recommend either of the following procedures:

   A. Use suitable bacteriostatic additive to help prevent the growth of bacteria in eyewash tank. Eyewash tank should be drained, flushed and refilled with clean potable water and bacteriostatic additive as directed by the additive's manufacturer.

   B. Drain, flush and refill portable units with clean potable water at least once every week. Thoroughly cleanse tank at least once every month.

   NOTE: Acanthamoeba survive mild chlorination and are commonly found in tap water. Hydrosep Bacteriostatic additive will prevent the growth of acanthamoeba. Hot water, 140 ° F(60°C) or hotter will destroy acanthamoeba but must be allowed to cool prior to use in eyewash units

REPLACEMENT PARTS

PART NUMBER	QUANTITY	DESCRIPTION
SP19	2	Head Assembly
SP130	1	Arm Hose Assembly with barb fitting.
SP131	1	Cap Assembly with bead chain.
9081	1	Bacteriostatic Additive
SP132	1	Drain hose with barb fitting
SP170	1	Test Tag, 25 per
0001240500	1	Breather Vent
9125	1	Thermal Insulating Jacket
	1	Velcro Kit

#0002080238 REV 6-89

DWG A-07782-S

Haws®

MODEL 9125
THERMAL PROTECTION JACKET

Available for Haws Model 7500 Portable Eyewash.

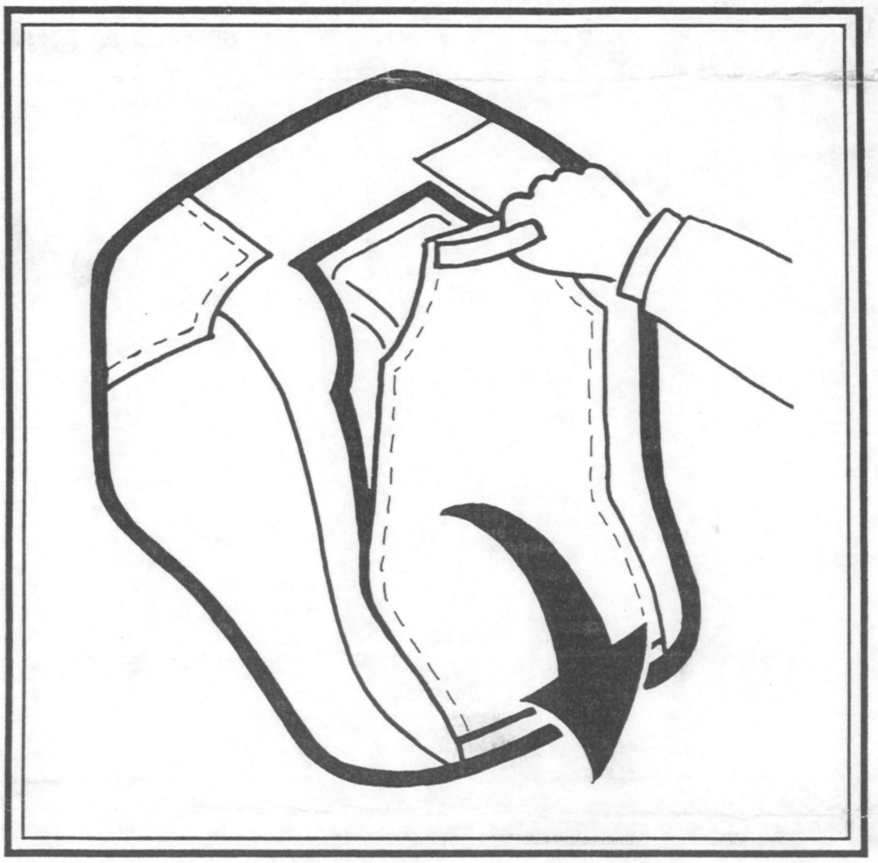

- ❒ Helps protect Model 7500 from excessive heat when exposed to the sun... Reflects sun rays away.
- ❒ Helps slow the rate of heating due to high ambient temperature.
- ❒ Helps slow the rate of cooling, offering improved protection if a short term "snap freeze" condition occurs.*

Designed so that when installed properly a single motion opens insulating jacket and activates eyewash.

Eyewash can be filled, serviced and tested without removing the jacket.

* *Note: When extended freeze conditions are expected we recommend Haws Model 7500EB Portable Eyewash. This model is electronically heated, thermostatically controlled and is furnished as a standard with an insulating jacket. It provides temperate water in harsh climates to -75° F.*

❖ HAWS DRINKING FAUCET COMPANY ❖ 1435 FOURTH ST. ❖ BERKELEY, CA 94710 ❖ (415)525-5801 ❖ FAX: 415-528-2812